




# Telstra Track and Monitor Bluetooth® Tracking Unit

## Quick Start Guide

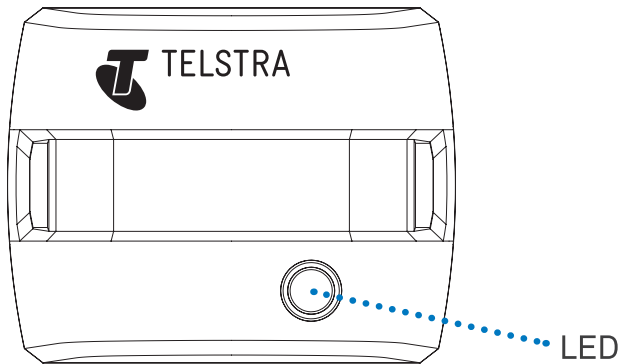

### Package Contents

- 20 x Bluetooth Tracking Units
- 20 x Keyrings
- 20 x IPA Alcohol Wipes
- 1 x Scouring Pad
- 1 x Magnet
- 1 x Quick Start Guide
- 1 x Warranty Leaflet

## Turning on your tracking unit

Your tracking unit will be in shipping mode when first removed from its packaging. Please follow the below steps to activate:

1. Obtain magnet from accessory slot.
2. Swipe magnet over the LED on the top of the unit. LED will start to slowly pulse.
3. Swipe magnet over the LED a second time to confirm activation and power on.

**Note:** Second swipe must be done within 5 seconds of first swipe. LED will stay on solid for 5 seconds to confirm this device has successfully powered up.


4. Navigate to <http://trackandmonitor.telstra.com> or alternatively search for Telstra Track and Monitor app on the Google Play Store or Apple App Store.
5. Log in with your Telstra ID to finalise setup and configuration.

## Troubleshooting and FAQs

If you experience any issues during the install and setup of your tracking unit please refer to [telstra.com/assettracking](http://telstra.com/assettracking) for assistance.

## Tracking unit information

The tracking tag lists key identifiers (including the serial number) on the side. After initial activation, the serial number is the identifier which you will use with the Track and Monitor web portal or Mobile app, or when you call Telstra for assistance.

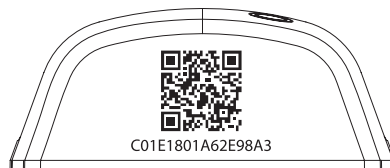

## Safety

A reminder that you are responsible for arranging installation of the tracking unit(s) on your assets and the installation should be completed in a way which complies with all relevant health and safety regulations and requirements.

## Battery Life and Durability

Extended exposure to conditions outside of the recommended temperature range (5°C to 50°C) may shorten the life of the tracking unit and battery life. Ensure you use the unit within the recommended operating temperature range (5°C to 50°C).